

Quick Start Guide

AIR-AP150GNH


150Mbps Wireless N Access Point



April, 2013

- 1) First, connect the power adapter of the AP to a wall outlet or power strip. The POW LED will light to indicate proper operation.
- 2) Secondly, connect the LAN port of the AP to a switch/router/modem by an Ethernet cable. The LAN LED will light to indicate a proper Ethernet connection.

Tips: The LAN Port on the AP is Auto MDI/MDIX, so you can use a straight-through or crossover cable to the LAN Port.

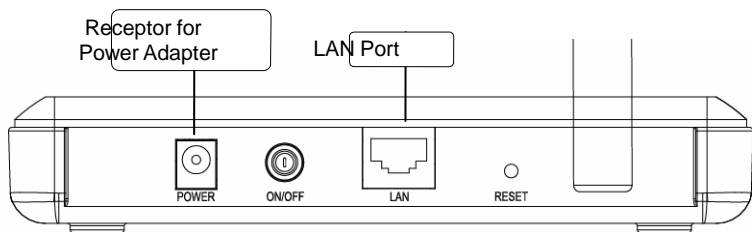

- 3) Now with default settings, your wireless adapter will connect to the AP automatically.

Default Settings: <http://192.168.0.254>

User Name: admin
Password: admin
SSID: AIRNET_XXXXXX
Channel: Auto
Operational Mode: Access Point

For more information about the settings, please refer to User Guide in the resource CD. We recommend that you finish the configuration on a PC connected to the AP by a cable.



This equipment may be operated in all EU countries (and other countries following the EU directive 1999/5/EC). Usage in the following countries might be subject to restrictions: FR, IT, NO. See detail information in product's document of resource CD.



Netkrom Technologies Inc.

2134 NW 99th Avenue Miami, FL 33172 - USA

Guía de Instalación Rápida

AIR-AP150GNH


150Mbps Wireless N Access Point



Abril, 2013

- 1) Primero, conecte el adaptador de poder del AP a una toma eléctrica. El LED POW se encenderá indicando una operación adecuada.
- 2) Segundo, conecte el Puerto LAN del AP hacia un switch/router/modem usando un cable Ethernet. El LED LAN se encenderá indicando una operación adecuada.

Nota: El Puerto LAN del AP soporta Auto MDI/MDIX, por lo tanto usted puede usar un cable directo o un cable cruzado en el puerto LAN.

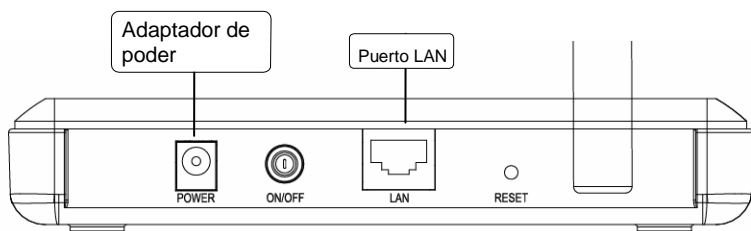

- 3) Usando los parámetros por defecto, usted podrá conectar su adaptador inalámbrico al AP automáticamente.

Parámetros por defecto: <http://192.168.0.254>

Usuario: admin

Contraseña: admin

SSID: AIRNET_XXXXXX

Canal: Auto

Modo de operación: Access Point

Para obtener más información sobre la configuración, remítase a la Guía del Usuario en el CD. Le recomendamos que termine la configuración con una PC conectada por cable directamente al AP.



Este equipo puede ser operado en todos los países de la UE (y otros países que siguen la directiva UE 1999/5/EC). El uso de este equipo en los países de FR, IT, podría estar sujeto a restricciones. Vea la información detallada en la documentación del equipo dentro del CD.



Netkrom Technologies Inc.

2134 NW 99th Avenue Miami, FL 33172 - USA